

Handset Wireless Microphone



Gateway Mobile Charger



Wearing the X10DR Handset

Always wear on your shoulder for best performance

Note: Your X10DR will provide longer range when worn with the antenna protruding above your shoulder.



Download & Read Lite User Manual:
www.x10dr.com/X10DR_Lite_user_manual.pdf

Operation

Gateway Off/On: press for 1 second, gateway and blue LED turns on. Press again for 1 second and gateway and blue LED turn off.

Handset Off/On: Put handset in powered gateway to turn on handset. Start up tones will sound. To turn off, press PTT, Vol + & Vol - buttons simultaneously for 2 seconds until handset and blue LED turn off.

Volume + : adjusts speaker volume louder.

Volume - : adjusts speaker volume softer.

Microphone: Speak 2 to 3cm from Mic port with a normal strength voice. Do not yell.

PTT: press to talk - release to listen.#

DC charging: Handset beeps to notify correct seating when first placed in gateway. The blue status LED momentarily blinks every 10 seconds to indicate charging mode. Constant blue means battery is fully charged.

Speaker: Delivers received speaker audio. Normally mutes when inserted into gateway.

Status light: glows blue when fully operational. Flashes when "out of range" or when its paired unit is turned off.

Antenna Connector: Allows connection of longer range external antenna or replacement of the short range internal type.

When out of range the unit will slowly beep when PTT is pressed.

X10DR Lite basic installation



XMCA Antenna

Mount on a vehicle roof rack etc - clear of obstructions in the direction you wish to predominately communicate.

If less than maximum range is required, you can choose to not fit coax cable kit and instead attach XMCA antenna directly to the base of X10DR Lite gateway.



XMCAK Antenna cable kit
(included in package)



XMC-RJ45 adaptor
(included in package)



XIC-1.5 interface cable
(included in package)



Radio specific **XCA** adaptor
-specify type when purchasing
(included in package)

Connects to the rear interface connector on your mobile radio

Connect RED wire to vehicle's permanent battery supply.

Alternate installation accessories



XMMPA "Sharkfin" multi-polarity antenna roof or rack mount includes 5.2 meters of low loss LMR200 type coax and terminated RP SMA male connector. Provides improved coverage especially non-line of sight. (order separately)

 


XEC-4.5

4.5m extension cable
Use when radio is mounted remotely in vehicle trunk.
(order separately)

Installation Notes

Please refer to www.x10dr.com/lite
Some radio types need minor programming or internal reconfiguration to ensure correct X10DR operation. Please review the installation instructions available from the X10DR website for model specific details.



The two trim pots on the base of the gateway have been factory set to suit a great variety of popular mobile radios. These can be adjusted, carefully, by a trained technician so as to increase/decrease the audio levels to better suit your particular model radio. See the X10DR Lite user manual for adjustment details. Download at: www.x10dr.com/Lite