

Power On/Off  
Control  
Emergency  
Status light  
Microphone  
PTT: Press-To-Talk  
Loudspeaker  
Volume Up  
Volume Down



**Power Off/On:** Hold for about 2 seconds to turn on or off. The Power Mic will sound escalating or de-escalating tones to advise status. The device does a self check and the status light then normally glows green. (see Control)

**Emergency:** Pressing Orange emergency button causes the status light to glow Red. Additionally, it will glow Red while any of the connected X10DR Handset users presses their Emergency button

**Status light:** Normally glows Green or Blue (see Control) when operational and changes to Red when Emergency is being activated.

**Microphone:** Talk in a normal strength voice about 3 to 5cm (1-2") from the microphone port.

**PTT:** Press to talk, release to listen. Default assignment is to talk over the gateway to wireless X10DR handsets. (see Control)

**Control:** Normally the Control button is configured so:  
A/ It allows the user to toggle the function of side PTT button between Radio PTT and Talkaround. LED glows Blue when assigned to Radio, and Green when Talkaround.  
B/ It is the Radio PTT button and the side PTT button is Talkaround. Alternatively it can be assigned to be Talkaround transmit button. (See over for re-configuration)

**Volume up/down:** Adjusts the speaker audio louder/softer and sounds a beep when pressed.



## Initial Set-Up

X10DR

When first attaching a Talkback Mic to your X10DR gateway system, you **need to** first set the microphone output level to suit the host mobile radio and the receive audio input for optimum speaker audio.


### Microphone Transmit Level Adjustment:

Press On/Off button while simultaneously holding the Volume Up button. When activation tone sounds, release buttons then speak into the Talkback Mic using a portable radio to monitor the host mobile's transmit audio. Press the Volume up/down buttons to so that audio matches that of the radio's wired microphone then short press side PTT button to lock the audio level.

### Speaker Listening Level Adjustment:

Press On/Off button while simultaneously holding the Volume down button. When activation tone sounds, release buttons then speak into a portable radio so you can monitor the host mobile receive audio output. Press the Volume up/down buttons to so that Talkback Mic Speaker audio is loud but not distorted then short press the side PTT button to lock the audio level.

## Basic installation

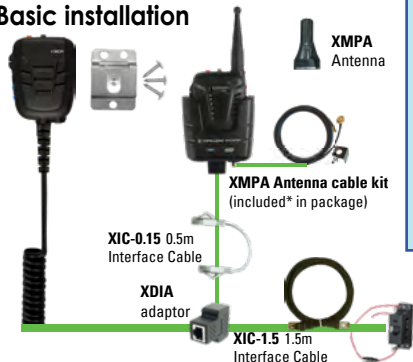

### PTT- Control Button Re-assignment Options:

- A/Control button Toggles PTT between Talkaround and Radio PTT.  
- Power up with side PTT pressed. (DEFAULT)
- B/Side PTT button is Talkaround PTT and top Control is Radio PTT.  
- Power up holding Control GREY button.
- C/ Side PTT button is Radio PTT and top Control is Talkaround PTT.  
- Power up with Orange Emergency pressed.

#### XCA adaptor

Radio specific - specify type when purchasing. Connects to the rear interface connector on your mobile radio.

Connect **RED** wire to vehicle's permanent battery supply.

**WHITE** wire, if supplied, is for Remote PTT use - do not connect unless required.



WIRELESS PACIFIC™